

## Netcomm N3G005W – Basic Wireless Setup Guide

**\*Note\*** Please ensure you have followed the Netcomm N3G005W Setup guide first before following this.

1. In the address bar enter: 192.168.123.254 as shown. Press Enter or 'Go'.

Address

2. It will ask you for the 'System Password' enter: admin and press 'Login'.

**System Password:**  (default: admin)

3. Click on Advanced Setup.
4. Click on Basic Setting.

**BASIC SETTING**

5. Click on Wireless.

**Wireless**

6. Please set the settings as follows:

<input type="checkbox"/> <b>Wireless Settings</b> <span style="float: right;">[ HELP ]</span>	
Item	Setting
▶ Wireless	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
▶ WMM Capable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
▶ SSID	<input type="text" value="netcomm n3g series"/>
▶ Channel	<input type="text" value="auto"/>
▶ Auto Select Channel	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
▶ Security	<input type="text" value="WPA"/>
▶ Encryption Type	<input type="radio"/> TKIP <input checked="" type="radio"/> AES
▶ RADIUS Server IP	<input type="text" value="0.0.0.0"/>
▶ RADIUS port	<input type="text" value="1812"/>
▶ RADIUS Shared Key	<input type="text" value="&lt;enter a password here&gt;"/>

**\*\* Note \*\*** Where it states '<enter a password here>' enter a password of your choosing. Please write this down as you will need it whenever a new computer connects to the router.

7. Click on Save.

8. On your computer connect to the wireless connection, it will ask you for a 'Network Key'. Input the password you entered above and click on Connect.

9. You have now successfully setup your wireless connection on the Netcomm Router.