



Netcomm N3G005W – Setup Guide

1. Plug the 3G modem into the USB slot on the back of the Netcomm Router.
2. Turn the device on.
3. Plug the Ethernet cable from the LAN Port on the back of the Netcomm Router into your PC or Laptop (windows should automatically set it up).
4. Open your Internet Browser (usually Internet Explorer).
5. In the address bar enter: 192.168.123.254 as shown. Press Enter or 'Go'.




Address

6. It will ask you for the 'System Password' enter: admin and press 'Login'.



System Password: (default: admin)

7. Click on Wizard Setup. Then click 'Enter'.

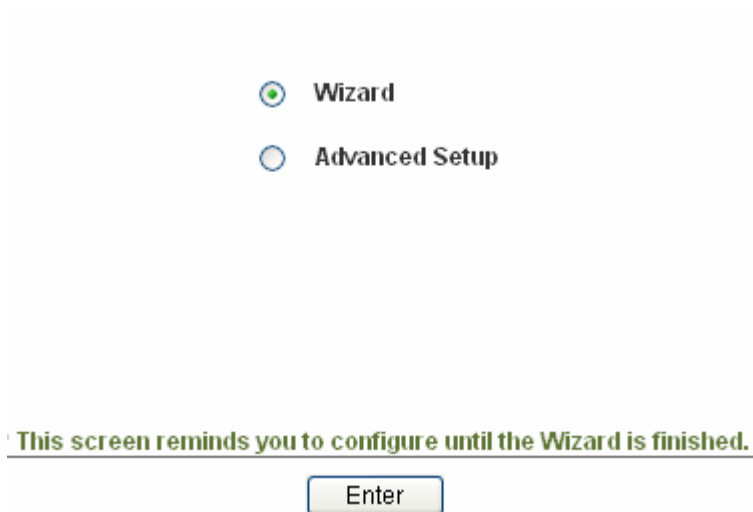

Wizard
 Advanced Setup

This screen reminds you to configure until the Wizard is finished.

8. Click Next.
9. Make sure 3G USB is selected and click on Next.



3G USB
 iBurst USB
 WAN Ethernet port

10. Enter the settings as follows, then click on Next.

▶ LAN IP Address	<input type="text" value="192.168.123.254"/>
▶ APN	<input type="text" value="Connect"/>
▶ Pin Code	<input type="text"/>
▶ Dialed Number	<input type="text" value="*99#"/>
▶ Username	<input type="text"/>
▶ Password	<input type="text"/>

*** Note: Do not change the LAN IP Address unless necessary.**

11. Click on Apply Settings.

12. Click on Finish.

13. You have now setup your Netcomm 3G Router successfully.